

LED HIGH BAY LIGHT

INSTALLATION GUIDE



| | |
|-------------------|--|
| VOLTS | 100-240V /277V AC |
| PROTECTION CLASS | Class I |
| POWER FACTOR | >0.95 |
| OPERATING TEMP. | -40°C ~ +50°C |
| BEAM ANGLE | 60°, 90°, 110° |
| HOUSING | ADC12 aluminium with type 316 stainless steel screws and bolts |
| HOUSING COLOR | Black |
| MOUNTING | Hook Loop, Various Brackets |
| IP RATING | IP65 |
| IK RATING | IK10 |
| CONNECTION METHOD | Cable, 3-pole |
| WARRANTY | 5 years |

| Nominal Wattage | Luminous Efficacy (±5%) | Lumen Output (±5%) | Fixture Dimension | Fixture Weight | Packing Type | EPA |
|-----------------|--|----------------------|-------------------|----------------|--------------|---------------------|
| 100W | 2835 Version: 190 lm /w 3030 Version: 145 lm /w | 19000 lm 14500 lm | 286 x286 x147mm | 2.6kg | 1unit /ctn | 0.098m ² |
| 150W | 2835 Version: -- 3030 Version: 140 lm /w | -- 21000 lm | 286 x286 x147mm | 2.6kg | 1unit /ctn | 0.098m ² |
| 150W | 2835 Version: 190 lm /w 3030 Version: -- | 28500 lm -- | 330 x330 x165mm | 3.4kg | 1unit /ctn | 0.131m ² |
| 200W | 2835 Version: 190 lm /w 3030 Version: 145 lm /w | 38000 lm 29000 lm | 330 x330 x165mm | 3.4kg | 1unit /ctn | 0.131m ² |

MOUNTING & CONNECTION INSTRUCTIONS

STEP1: Open the packaging and check the product. In case of any damage, contact us.

STEP2: Fasten the ring or bracket onto high bay light with screws provided.







STEP3: Adjust the high bay light to direct the light in the desired direction before tightening the screws.

(Bracket Mounted)

STEP4: Be sure to connect the cable correctly. Brown-Live, Blue- Neutral, Yellow/Green- --Ground.

STEP5: Switch the voltage on and check to see that the high bay light works properly.

Recommended torque: 12Nm ± 1Nm (Bracket Mounted)

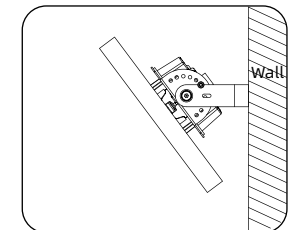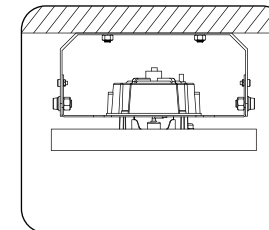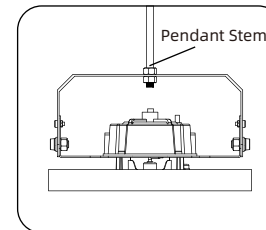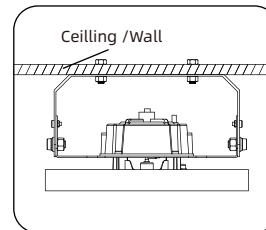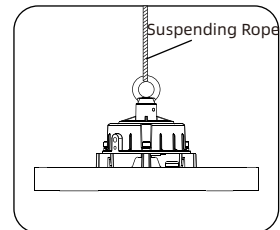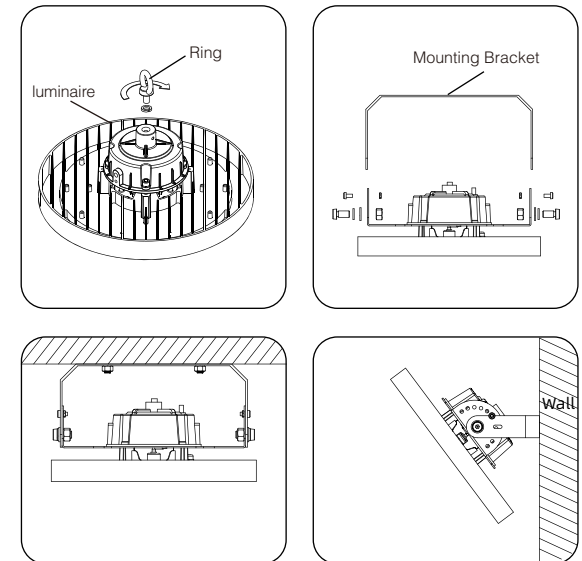

CAUTION

- Installation and maintenance must be performed by professionals only.
- Please ensure the holder is strong enough and the screws are tightened.
- The ground wire must be securely connected.
- Please make sure the lamp is working with correct input voltage.
- Cut off the power before maintenance.
- Do not use chemicals or corrosive cleaner to clean the fixture.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively, replaced by qualified person in order to avoid a hazard.